


Instructions TLE-ST/XT

The TerraLUX Streamlight Stinger/XT LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module with the Streamlight Stinger flashlight (see photo). To Install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by aligning the arrow with the screw inside the flashlight. Then press down gently to insert the pins into the socket. This also guarantees the proper polarity. Test that the unit lights up. Then screw the new head assembly onto the LED. **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.


Runtime: 2 Hours on fully charged batteries
LED Light Output: 220 Lumens

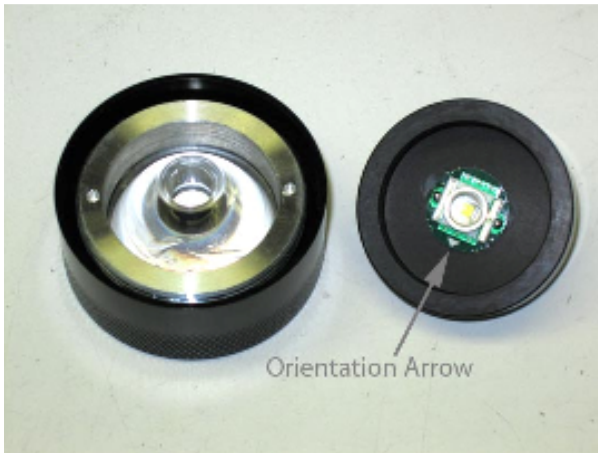

Instructions TLE-ST

The TerraLUX Streamlight Stinger/XT LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module with the Streamlight Stinger flashlight (see photo). To Install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by aligning the arrow with the screw inside the flashlight. Then press down gently to insert the pins into the socket. This also guarantees the proper polarity. Test that the unit lights up. Then screw the new head assembly onto the LED. **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.

Runtime: 2 Hours on fully charged batteries
LED Light Output: 220 Lumens

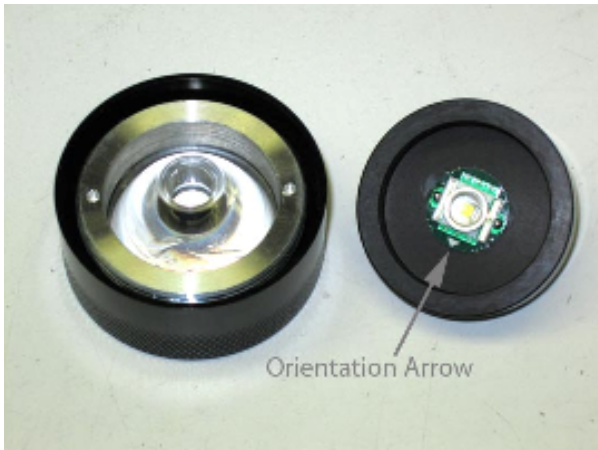

Instructions TLE-ST

The TerraLUX Streamlight Stinger LED upgrade kit consists of two parts, the **Head** (left in the photo) and the **LED Module** (Right). An arrow on the top side of the LED Module is used to orient the Module with the Streamlight Stinger flashlight (see photo). To Install the unit first remove the head, incandescent bulb and reflector and store for future use. Insert the LED module first by aligning the arrow with the screw inside the flashlight. Then press down gently to insert the pins into the socket. This also guarantees the proper polarity. Test that the unit lights up. Then screw the new head assembly onto the LED. **DO NOT OVERTIGHTEN!** The focus of the beam can be adjusted by rotating the head assembly. Remove the TerraLUX product and restore the original head and reflector prior to returning the flashlight for repairs.

Runtime: 2 Hours on fully charged batteries
LED Light Output: 220 Lumens